

# xiaomi

Cordless Hair Straightener Brush  
User Manual



Read this manual carefully before use, and retain it for future reference.

## Safety Instructions

---

Make sure to observe the following safety precautions to reduce the risks of errors, electric shocks, injuries, fires, deaths, and damage to equipment or property.

### WARNINGS:

- Do not use the brush near a full bathtub, shower, sink or other utensils containing water.
- Do not immerse the brush in water.
- Do not use the brush with wet hands to prevent electric shock.
- Do not use the brush near petroleum gas or other flammable materials (such as volatile agents, paints, thinners, sprays) as this may result in explosion or fire.
- Do not hit the brush and prevent it from dropping. If the brush sustains damage from collision or dropping, please stop using it.
- Do not apply any chemical-based styling products, such as gel, styling mousse and hair wax, to your hair prior to using the brush in order to prevent potential ignition of hair.
- The surface temperature of the brush teeth can reach up to 200°C during operation. Therefore, it is advised not to place the brush on flammable materials such as cushions or blankets, and avoid covering the brush with any object, as this may pose a fire hazard.
- Do not touch the brush teeth directly when in use to avoid potential burns.
- If you are not sensitive to heat, do not use the

brush close to your skin, as this may result in burns.

- The use, cleaning, and maintenance of the brush by individuals (including children) who lack relevant experience and knowledge, such as those with physical disabilities or mental disturbances, shall be conducted under the supervision and guidance of a parent or guardian.
- Keep the brush out of the reach of children and infants.
- Unsupervised usage of the brush by children is not allowed.
- Do not allow children to play with the brush.
- Do not cause any damage, modification, excessive pulling or twisting to the power cord.
- When inserting and removing the charging plug, avoid directly pulling on the charging cable and do not move the brush by lifting the charging cable.
- Do not put or insert any foreign objects into the brush.
- Do not modify or repair the brush by yourself.
- The brush contains built-in rechargeable batteries. Do not throw them into fire, or charge use, or place them in a high-temperature environment.
- Do not charge the brush in a humid environment.
- Please dispose of the packaging properly to avoid suffocation risks to infants and children.
- Store the brush in a cool and dry location, away from direct sunlight or any heat source.
- This appliance is not intended for use by persons (including children) with reduced

physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- This appliance contains batteries that are non-replaceable.

### CAUTIONS:

- Check the brush for obvious damage before use. Do not use it if it is damaged.
- For additional protection, it is recommended to install a residual current device (RCD, sold separately) with a rated residual operating current of no more than 30 mA in the bathroom's electrical circuit. Check with the RCD installer for details.
- Stop using the charging cable if it is damaged or working improperly.

- Keep the charging port dry when charging.
- Do not wrap the charging cable around the brush to avoid damage to the charging cable.
- Fully charge the brush at least once every six months, if it has not been used for an extended period of time.


### Notes:

- The brush is solely for hair styling and shall not be used for any other purposes.
- The brush is not intended for pets.
- Please use the provided power adapter and charging cable to charge the brush; otherwise it may cause damage to the brush.
- The charging ambient temperature shall not exceed 40°C.
- After using the brush, please turn it off and allow for sufficient cooling prior to storage or carrying during travel.
- Make sure the travel lock on the brush is enabled during travel.
- Please clean and maintain the brush regularly.



Do not use this appliance near bathtubs, showers, basins or other vessels containing water.


# Product Overview

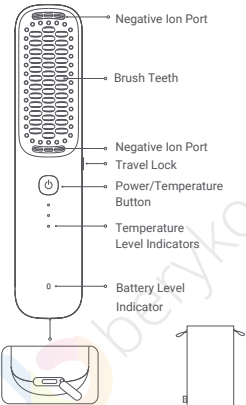

Type-C Charging Port  
(at the bottom of the brush))



Pouch

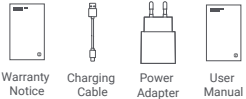

**Note:** Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

## How to use

---

### Charging

Plug the charging cable into the Type-C charging port at the bottom of the brush and connect it to the power supply to start charging.



Type-C Charging Port

### Notes:

- Please fully charge the brush before use to ensure sufficient styling time. It takes about three hours to fully charge the battery, and the charging time may vary slightly depending on the power supply efficiency.
- The brush may heat during the charging process, which is normal.
- Once fully charged, please promptly disconnect the power.


## Indicator Status Descriptions

Hair Straightener Brush Status	Indicator Status
Sufficient battery	The battery level indicator is off.
Low battery	The battery level indicator blinks orange.
Battery depleted	Both the temperature level indicator and battery level indicator are off.
Charging	The battery level indicator is breathing white.
Fully charged	The battery level indicator keeps white.

### Travel Lock

To enable the travel lock, push it to "⊖".

To disable the travel lock, push it to "⊕".

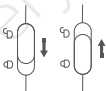

### Notes:

- To prevent accidental activation and potential damage to the brush or surrounding items, please ensure that the travel lock is enabled when carrying the brush during travel.
- Please make sure the travel lock is disabled before use; otherwise the brush cannot be turned on and used normally.



## Turning On/Off

- Press and hold the power button for two seconds, and a beep will be heard. The brush will turn on and start the warm-up process. When the brush is turned on for the first time, the temperature is set to level 2 by default (about 180°C). Once the warm-up process is completed, the temperature level indicator will remain on and display the corresponding level.
- Press and hold the power button for two seconds. The brush will turn off when you hear a beep, and both the battery level indicator and the temperature level indicator will go off.



### Notes:

- Please make sure the travel lock is disabled before turning on the brush.
- The brush features safety protection and will automatically turn off after 30 minutes of operation. If you wish to continue using the brush, simply press and hold the power button for two seconds to restart.
- The release of negative ions is a consistent occurrence during operation of the brush.
- The production of slight sound by the negative ion generator is a normal phenomenon.




## Temperature Level Switching

- After turning on the brush, press the temperature button to cycle through three levels of temperature. You can select the appropriate temperature level based on

your specific hair needs.

- The corresponding temperature level indicator will light up when the levels are switched. Once a level is selected, the brush will begin to warm up and the corresponding temperature level indicator will blink white. The indicator will remain on once the warm-up process is completed.

## Temperature Level Indicator Descriptions

Temperature Level	Indicator Status (after the warm-up process is completed)
 Level 3 (about 200°C)	All indicators remain on.
 Level 2 (about 180°C)	No. 2 and No. 3 indicators remain on.
 Level 1 (about 160°C)	No. 3 indicator remains on.

Temperature recommendations:

Level 1: Suitable for bleached, damaged and fine hair.

Level 2: Suitable for normal and slightly curly hair.

Level 3: Suitable for severely curly, coarse and hard hair.

# Styling Methods

---

## Notes:

- Before styling, make sure the hair is thoroughly dry and well combed.
- It is recommended to use a towel around the neck to mitigate the risk of skin burns resulting from incorrect operation.
- The new brush may emit a slight odor when exposed to high temperatures during operation, which is normal. The intensity of the odor will gradually diminish with repeated use.

## Straight Hair

After warm-up, take an appropriate amount of hair and straighten it with one hand while holding the handle of the brush with the other hand. Use the brush teeth to slowly and smoothly comb down from the roots to the tips of the hair, starting from 1–3 cm away from the roots.



Repeat these steps until achieving the desired straightening effect.

## Notes:

- During the process of combing, ensure that the brush teeth are kept at a certain distance from your skin and eyes.
- After styling, press and hold the power button for two seconds to turn off the brush.

Wait until the hair has cooled down before proceeding with combing.

## Curly Hair

- Outward curls: After completing the straight hair styling, gently wrap the hair around the brush teeth starting from the hair ends and gradually roll it outwards, allowing the brush to rest at the hair ends for 3–5 seconds. Repeat this process about 3–5 times until achieving the desired curly effect.



- Inward curls: After completing the straight hair styling, gently wrap the hair around the brush teeth starting from the hair ends and gradually roll it inwards, allowing the brush to rest at the hair ends for 3–5 seconds. Repeat this process about 3–5 times until achieving the desired curly effect.

**Note:** Actual styling results may exhibit slight variations based on individual hair types, environment and styling methods.

## Care & Maintenance

---

Use a soft damp cloth to wipe clean the brush, then dry the surface with a dry soft cloth to remove moisture.

### WARNINGS:

- Before cleaning, please turn off the brush, disconnect the power supply, and ensure that the brush has completely cooled down.
- Do not use sharp objects or corrosive, volatile thinners to clean the brush.



## Environmental Protection

---



When the product reaches the end of its service life, please remove, dispose of and recycle the built-in battery according to local laws and regulations of the country or region where the product is used. If the battery cannot be removed, dispose of it in strict accordance with the regulations on classified domestic waste disposal in your area.

### WARNINGS:



- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- The battery is to be disposed of safely.

How to remove the battery:



1. After turning off the brush, use a flat screwdriver to gently pry open the brush teeth, and then use a Phillips screwdriver to remove the bottom screws.

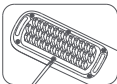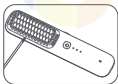

2. Use a flat screwdriver to pry open the handle back cover, and then use a Phillips screwdriver to remove the screws.

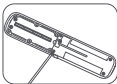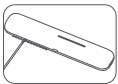

3. Remove the bracket inside the handle, and the teeth plate, remove the screws, cut the leads connecting both ends of the battery to the circuit board, and remove the battery.

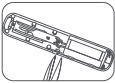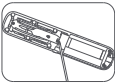

**CAUTION:** If your skin comes into contact with any substance that may leak out of the battery, rinse the contact area with plenty of water and seek medical attention immediately.

## Troubleshooting

Errors	Possible Causes	Solutions
The brush does not work after turned on	Battery depleted	Charge in time
	Brush damaged	Contact the after-sales service team
	Travel lock enabled	Disable the travel lock
Charging error	Charging cable damaged	Replace the charging cable

**CAUTION:** If the error persists after trying the above solutions, please contact the after-sales service team.

## Specifications

Name	Hair Straightener Brush
Model	MJZFS01LF
Operating Voltage	7.2 V=
Rated Power	28 W
Charging Voltage	5 V=
Charging Current	2 A
Item Dimensions	206.5 × 44 × 43.5 mm
Power Consumption	Off mode: ≤0.3 W
Time to Enter the Condition	Off mode: ≤20 min



## Power Adapter

Input: 100–240 V $\sim$ , 50/60 Hz, 0.35 A	Output: 5.0 V $\equiv$ 2.0 A, 10.0 W
--	---

Information Published	Value and Precision	Unit
Manufacturer's Name	Jiangxi Jian Aohai Technology Co., Ltd.	—
Model Identifier	A726-050200U-EU2	—
Input Voltage	100–240	V $\sim$
Input AC Frequency	50/60	Hz
Output Voltage	5.0	V $\equiv$
Output Current	2.0	A
Output Power	10.0	W
Average Active Efficiency	79.04	%
Efficiency at Low Load (10%)	74.39	%
No-load Power Consumption	0.075	W

## Europe-EU Declaration of Conformity



We, Xiaomi Communications Co., Ltd.,  
hereby declare that this equipment

is in compliance with the applicable Directives  
and European Norms, and amendments. The full  
text of the EU declaration of conformity is  
available at the following internet address:  
[http://www.mi.com/global/service/support/  
declaration.html](http://www.mi.com/global/service/support/declaration.html)

## WEEE Disposal and Recycling Information



All products bearing this symbol are  
waste electrical and electronic  
equipment (WEEE as in directive  
2012/19/EU) which should not be  
with unsorted household waste. Instead, you  
should protect human health and the  
environment by handing over your waste  
equipment to a designated collection point for  
the recycling of waste electrical and electronic  
equipment, appointed by the government or local  
authorities. Correct disposal and recycling will  
help prevent potential negative consequences to  
the environment and human health. Please  
contact the installer or local authorities for more  
information about the location as well as terms  
and conditions of such collection points.

Manufacturer: Xiaomi Communications Co., Ltd.

Address: #019, 9th Floor, Building 6, 33 Xi'erqi Middle  
Road, Haidian District, Beijing, 100085, China

For further information, please go to [www.mi.com](http://www.mi.com)

For detailed e-manual, please go to

[www.mi.com/global/support/user-guide](http://www.mi.com/global/support/user-guide)

Made in China

User Manual Version: V1.0



Importer:  
Beryko s.r.o.  
Pod Vinicemi 931/2, 301 00 Plzeň  
[www.beryko.cz](http://www.beryko.cz)



63603



PAP

EU REP.

Xiaomi Technology Netherlands B.V.  
Prinses Beatrixlaan 582, 2595BM, The Hague, The  
Netherlands [contact@support.mi.com](mailto:contact@support.mi.com)